



J Boats rudder spare parts compatibility guide

| Boat Model |
|------------|
| J 97 |

| Bearing house | Bottom bearing ball with rollers | Top bearing ball |
|---------------|----------------------------------|------------------|
| SKU | SKU | SKU |
| | BWR-044-075 | BWR-044-086 |

Nauticat rudder spare parts compatibility guide

| Boat Model |
|-------------|
| Nauticat 44 |

| Bearing house | Bottom bearing ball with rollers | Top bearing ball |
|---------------|----------------------------------|------------------|
| SKU | SKU | SKU |
| | BWR-054-086 | BWR-054-086 |

Salona rudder spare parts compatibility guide

| Boat Model |
|------------------------|
| Salona 33 |
| Salona 34 |
| Salona 35 |
| Salona 37 fino al 2007 |
| Salona 37 dal 2008 |
| Salona 38 - 2010 |
| Salona 38 - 2013 |
| Salona 41 |
| Salona 42 |
| Salona 44 |

| Bearing house | Bottom bearing ball with rollers | Top bearing ball |
|---------------|----------------------------------|------------------|
| SKU | SKU | SKU |
| | | |
| M53-105 | BWR-054-090 | BWR-050-090 |
| | | |
| JP101408 | BWR-063-110 | BWR-040-065 |
| M53-110 | BWR-063-120 | BWR-040-070 |
| M53-110 | BWR-063-120 | BWR-040-070 |
| M53-110 | BWR-063-120 | BWR-050-090 |
| M53-110 | BWR-068-120 | BWR-050-090 |
| M53-110 | BWR-068-120 | BWR-050-090 |
| JP101408 | BWR-072-110 | BWR-050-090 |